

# MODEL VFC FOAM CHAMBERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page.

### 1. GENERAL DESCRIPTION

Foam Chambers are suitable for the protection of fixed roof-mounted tanks and are to be used as low expansion Type II discharge devices (as defined by NFPA11) with approved and/or listed Foam Concentrates and Proportioning Devices.

Foam Chambers are designed to apply an expanded foam blanket over the surface of a flammable liquid fire as gently as possible to achieve extinguishment and/or vapor suppression. A deflector positioned on the inside of the storage tank directs the expanded foam back onto the wall of the tank. The foam runs down the wall of the tank onto the liquid surface, minimizing submergence and fuel pick-up thereby maximizing the positive effect of the foam.

Low Expansion Foam Deluge Systems are the preferred protection for large outdoor tanks of flammable liquids. Typical applications include manufacturing plants, large tank farms, oil refineries and chemical plants.

NOTE: The information in this document is subject to change without notice.

### 2. LISTINGS AND APPROVALS

The Foam Chamber is UL Listed as part of a fire extinguishing system combining designated foam concentrates, proportioning devices and bladder tanks. Listed system components can be found at https://iq.ulprospector.com



UL Listed - GHXV.EX5194

NOTE: Other International approval certificates may be available upon request.





### 3. TECHNICAL DATA

### 3.1 Construction Features

- Available in 2.5", 3", 4", 6" sizes to cover a wide range of design configurations
- Painted Carbon Steel or Painted Stainless Steel for increased corrosion protection
- Available with ANSI 150 or PN16 Flanges
- Lifting lug/handle to assist with installation and servicing
- Choice of 2 Deflectors: Solid and Split (For installation from outside of storage tank)
- Specifically UL Listed with Viking Foam Concentrates.

### 3.2 Standard Materials

Table 3.2.1 - Standard Materials								
	Carbon Steel Version	Stainless Steel Version						
Body	Carbon Steel ASME SA-106 Gr.B / EN P265GH	Stainless Steel ASME SA-182 F316 / EN 1.4401 AISI-316						
Flanges (ANSI 150 or PN16)	Carbon Steel ASME SA-105 / EN P245GH	Stainless Steel ASME SA-182 F316 / EN 1.4401 AISI-316						
Vapor seal	Aluminium	Aluminium						
Calibrated orifice material	Stainless Steel UNS-S30400	Stainless Steel UNS-S30400 / ASME SA-182 F316 / EN 1.4401 AISI-316						
Paint	Epoxy zinc-rich primer with aliphatic polyurethane finish	Epoxy zinc rich primer with aliphatic polyurethane finish						
Standard color	RAL3000 Red	RAL3000 Red						
Inlet Flange Gasket	Composite	Composite						





# MODEL VFC FOAM CHAMBERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page.

# 3.3 Standard Design Specifications

Table 3.3.1 - Standard Design Specifications												
		Working Pressure <sup>1</sup>			Flow Range				Ouiffice Demand			
Model	Inlet Size	Mini	mum	Maxi	mum	Mini	mum	Maxi	mum	Orifice Range		Approval <sup>2</sup>
	0.20	PSI	bar	PSI	bar	GPM	LPM	GPM	LPM	Inches	mm	
	2.5"	30	2.07	125	8.61	36	137	226	855	0.600 - 1.050	15 – 27	UL
VFC	3"	30	2.07	125	8.61	82	312	480	1818	0.906 – 1.531	23 – 39	UL
VFC	4"	30	2.07	125	8.61	131	496	740	2800	1.142 – 1.900	29 – 48	UL
	6"	30	2.07	125	8.61	362	1372	1261	4774	1.900 – 2.481	48 – 63	UL

#### Footnotes:

## 3.3.1 Determining Orifice Size

After determining the required foam flow rate and available pressure, the orifice must be sized using the following formula:

$$d = \left( \frac{Q}{18.327 \cdot P^{1/2}} \right)^{1/2}$$

 $d = Orifice \emptyset (in.)$ 

Q = Solution Flow Rate (GPM)

P = Pressure at orifice inlet (PSI)

#### 3.3.2 Vapor Seal

Vapor Seal burst pressure is 10-25 psi (0.69 - 1.72 bar) measured just upstream of inlet orifice as required by UL162. Maximum allowable backpressure is 2 psi (0.14 bar).

### 3.4 Ordering Information

Inlet orifice plate(s) are manufactured according to your specific project requirements. The following steps should be followed to ensure the correct order processing information is specified.

- 1. Use the tables in section 7 (Performance Data) to determine what size Foam Chamber will satisfy the flow and pressure requirements for your specific project. (Required)
- 2. Check the UL Listing for the specific foam concentrate model to ensure the inlet pressure, orifice size and fuel type is listed. (Recommended)
- 3. Select the Foam Chamber size, flange pattern and material from table 3.4.1. (Required)
  - NOTE: The Foam Chamber part number from this table is used at the quotation stage only for the Americas ordering territory.
- 4. Select a Split or Solid Deflector with the flange pattern that matches the outlet flange pattern of the Foam Chamber. (Required)
- 5. If required, select the Mounting Flange with the flange pattern that matches the outlet flange pattern of the Foam Chamber. (Optional)
- 6. The Foam Chamber is supplied with a vapor seal already installed. If spare vapor seals are required then refer to table 13.1. (Recommended)
- 7. When the official purchase order is made for a Foam Chamber, the Foam Chamber size, orifice inlet pressure and desired flow rate must be provided. Please use the Foam Chamber order form (F\_061217A) to ensure your order is processed correctly (Required)

**NOTE:** The inlet orifice size will be manufactured to match the pressure and flow information that you provide in step 7. The final (ordering) part number for the Americas ordering territory will be the base part number for the Foam Chamber and a serialized suffix.

Refer to your customer service representative for further information and order form.

Table 3.4.1 Ordering Information									
Description	Material	Finish	Base Par	t Number	Weight				
Description	iviateriai	Finish	ANSI 150	PN16	Lbs.	Kg			
2.5" Foam Chamber	Carbon Steel	Painted	F20904	F20905	94.4	42.8			
Split Deflector	Carbon Steel	Painted	F20941	F20943	4.2	1.9			
Solid Deflector	Carbon Steel	Painted	F20937	F20939	4.2	1.9			
4" Mounting flange with studs	Carbon Steel	Painted	F20919	F20920	11.9	5.4			
2.5" Foam Chamber	Stainless Steel 316	Painted	F20906	F20907	99.0	44.9			
Split Deflector	Stainless Steel 316	Painted	F20942	F20944	4.4	2.0			

Table continues on next page.

<sup>1</sup> Working pressure at the inlet orifice of the foam chamber.

<sup>&</sup>lt;sup>2</sup> Please refer to https://iq.ulprospector.com for specific listing details.



# **MODEL VFC FOAM CHAMBERS**

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page.

Continued from previous page.

Table 3.4.1 Ordering Information								
Description	Matarial	Finiah	Base Pai	rt Number	Weight			
Description	Material	Finish	ANSI 150	PN16	Lbs.	Kg		
Solid Deflector	Stainless Steel 316	Painted	F20938	F20940	4.4	2.0		
4" Mounting flange with studs	Stainless Steel 316	Painted	F20921	F20922	12.5	5.7		
3" Foam Chamber	Carbon Steel	Painted	F21203	F21204	145.9	66.2		
Split Deflector	Carbon Steel	Painted	F21169	F21171	8.6	3.9		
Solid Deflector	Carbon Steel	Painted	F21157	F21159	8.6	3.9		
6" Mounting flange with studs	Carbon Steel	Painted	F21181	F21182	16.8	7.6		
3" Foam Chamber	Stainless Steel	Painted	F21205	F21206	153.2	69.5		
Split Deflector	Stainless Steel	Painted	F21170	F21172	9.0	4.1		
Solid Deflector	Stainless Steel	Painted	F21158	F21160	9.0	4.1		
6" Mounting flange with studs	Stainless Steel	Painted	F21183	F21184	17.6	8.0		
4" Foam Chamber	Carbon Steel	Painted	F21207	F21208	201.9	91.6		
Split Deflector	Carbon Steel	Painted	F21173	F21175	13.7	6.2		
Solid Deflector	Carbon Steel	Painted	F21161	F21163	13.7	6.2		
8" Mounting flange with studs	Carbon Steel	Painted	F21185	F21186	21.4	9.7		
4" Foam Chamber	Stainless Steel	Painted	F21209	F21210	212.1	96.2		
Split Deflector	Stainless Steel	Painted	F21174	F21176	14.4	6.5		
Solid Deflector	Stainless Steel	Painted	F21162	F21164	14.4	6.5		
8" Mounting flange with studs	Stainless Steel	Painted	F21187	F21188	22.5	10.2		
6" Foam Chamber	Carbon Steel	Painted	F21211	F21212	393.3	178.4		
Split Deflector	Carbon Steel	Painted	F21177	F21179	17.9	8.1		
Solid Deflector	Carbon Steel	Painted	F21165	F21167	17.9	8.1		
10" Mounting flange with studs	Carbon Steel	Painted	F21189	F21190	35.9	16.3		
6" Foam Chamber	Stainless Steel	Painted	F21213	F21214	412.9	187.3		
Split Deflector	Stainless Steel	Painted	F21178	F21180	18.8	8.5		
Solid Deflector	Stainless Steel	Painted	F21166	F21168	18.8	8.5		
10" Mounting flange with studs	Stainless Steel	Painted	F21191	F21192	37.7	17.1		

### 4. SCOPE OF DELIVERY

Ensure that all components are complete and in good condition.

### Includes:

- Foam Chamber
- Sized Orifice (Quantity 1)
- Installed Vapor Seal (Quantity 1)
- Inlet Flange Gaskets (Quantity 2)
- Lifting lug to allow safe maneuverability on site.

### Not Included

- Tank Mounting Flange (Sold Separately see table 3.4.1)
- Split/Solid Deflector (Sold Separately see table 3.4.1)

# 5. AVAILABILITY

Please contact your local Viking sales office for further information.

The product is available directly from Viking and official distributors only.

**EMEA:** Viking SA, ZI Haneboesch, L-4562 Differdange / Niederkorn, Tel.: +352 58 37 37 - 1, Fax: +352 38 37 36, vikinglux@viking-emea.com

Americas: The Viking Corporation, 210 N. Industrial Park Drive, Hastings, Michigan 49058, Toll free phone: (800) 968-9501 APAC: The Viking Corporation (Far East) Pte. Ltd., 69 Tuas View Square, Westlink Techpark, Singapore 637621 Tel: (+65) 6 278 4061, Fax: (+65) 6 278 4609, Email: vikingsingapore@vikingcorp.com

MODEL VFC FOAM CHAMBERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page.

# 6. PRODUCT VARIANTS

# 6.1 Options

- Also available with Galvanized or Paint over Galvanized Finish (Not UL Listed)
- Various Colors
- Internal Paint

# 6.2 Dimensions: Foam Chambers

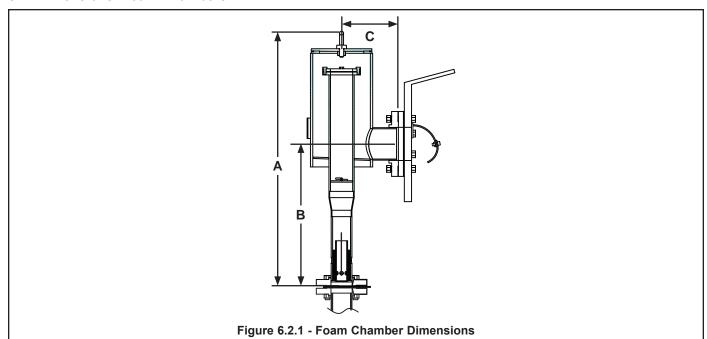


	Table 6.2.2 - Foam Chamber Dimensions									
	Foam			В			С			
Part Number	Chamber/ Inlet Flange Size	Outlet Flange Size	Material	Mounting Flange Style	In.	mm	ln.	mm	ln.	mm
F20904			Steel	ANSI						
F20905	2-1/2"	4"	Steel	PN16	35.30	897	19.67	500	7.87	200
F20906	2-1/2	4	Stainless Steel	ANSI	33.30					200
F20907			Stainless Steel	PN16						
F21203			Steel	ANSI		1025	23.62	600	9.84	250
F21204	3"	6"	Steel	PN16	40.35					
F21205	3		Stainless Steel	ANSI	40.33					
F21206			Stainless Steel	PN16						
F21207			Steel	ANSI	_			650	11.81	300
F21208	4"	8"	Steel	PN16	41.18	1046	25.59			
F21209	4	°	Stainless Steel	ANSI	41.10	1046	25.59			
F21210			Stainless Steel	PN16						
F21211			Steel	ANSI			29.92	760		355
F21212	6"	10"	Steel	PN16	54.57	1386			13.97	
F21213	U	"	Stainless Steel	ANSI	34.57	1300			13.31	300
F21214			Stainless Steel	PN16						

# MODEL VFC FOAM CHAMBERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page.

# 6.3 Dimensions: Deflectors


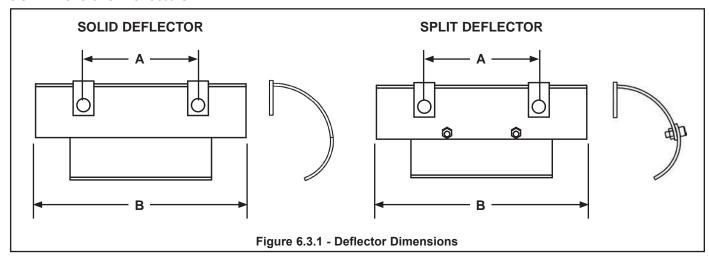


Table 6.3.2 - Deflector Dimensions								
Dout Neverland	Farm Observer Oiss	06.4	, A	4	E	3	Wei	ght
Part Number	Foam Chamber Size	Style	Inches	mm	Inches	mm	LB	KG
F20937	2-1/2"		6.93	176			4.19	1.90
F20939			6.53	166	12.01	005	4.19	1.90
F20938			6.93	176	] 12.01	305	4.40	2.00
F20940			6.53	166			4.40	2.00
F21157			8.78	223			8.60	3.90
F21158	3"		8.74	222	18.11	460	9.03	4.10
F21159	] 3		8.78	223	10.11	460	8.60	3.90
F21160		SOLID	8.74	222			9.03	4.10
F21161		SOLID	10.87	276		610	13.67	6.20
F21162	4"		7.80	198	24.00		14.35	6.51
F21163	4"		10.87	276	24.02		13.67	6.20
F21164			7.80	198			14.35	6.51
F21165			10.08	256	25.59	650	17.86	8.10
F21166	G"		9.80	251			18.75	8.51
F21167	6"		10.08	256			17.86	8.10
F21168	]		9.80	251			18.75	8.51
F20941			6.93	176	12.01	305	4.19	1.90
F20943	0.4/0"		6.53	166			4.19	1.90
F20942	2-1/2"		6.93	176			4.40	2.00
F20944	]		6.53	166			4.40	2.00
F21169			8.78	223			8.60	3.90
F21170	3"		8.74	222	18.11	460	9.03	4.10
F21171	] 3		8.78	223			8.60	3.90
F21172	]	SPLIT	8.74	222			9.03	4.10
F21173		SPLII	10.87	276			13.67	6.20
F21174	4,,		7.80	198	1 04 00	040	14.35	6.51
F21175	4"		10.87	276	24.02	610	13.67	6.20
F21176		İ	7.80	198			14.35	6.51
F21177			10.08	256			17.86	8.10
F21178	0,,		9.80	251	] 05.50	050	18.75	8.51
F21179	6"		10.08	256	25.59	650	17.86	8.10
F21180			9.80	251			18.75	8.51

# MODEL VFC FOAM CHAMBERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page.

# 7. PERFORMANCE DATA

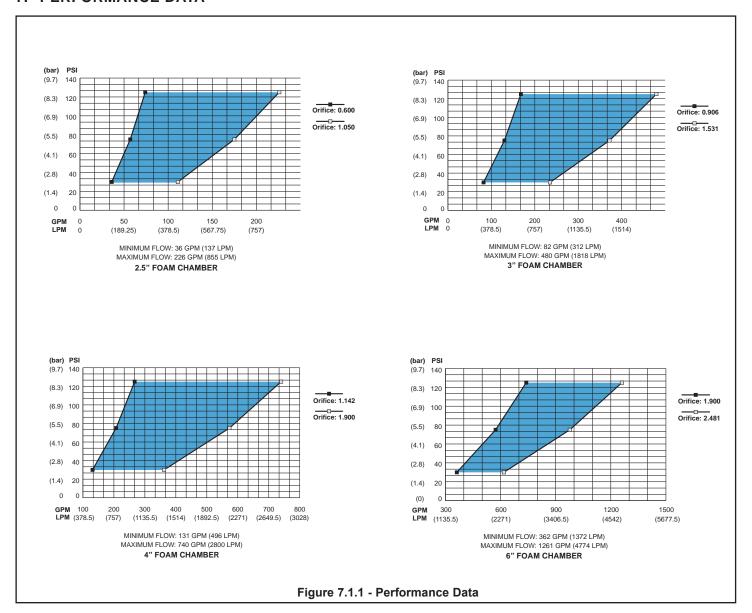

# MODEL VFC FOAM CHAMBERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page.

## 8. INSTALLATION

Refer to appropriate Installation Standards (i.e. NFPA11, EN13565-2).

Do not alter the piping without consulting a system design representative.

Foam chambers are compatible with many types of Foam Concentrate but are only UL Listed when used with the specific Foam Concentrates detailed on https://iq.ulprospector.com

Foam Chambers are generally installed on the side wall of vertical storage tanks above the maximum product storage level. Piping coupled to the unit can be linked to a fixed foam proportioning system, or terminated a safe distance from the tank, where foam solution can be delivered via mobile fire apparatus or portable foam proportioning equipment.

Care should be taken during the filling of the storage tanks with flammable liquids to ensure that the internal pressure is relieved to avoid rupturing the Foam Chamber vapor seals due to excessive back pressure.

It is recommended to install the deflector before the foam chamber is positioned onto the tank wall studs or mounting flange bolts. If the storage tank is new and access is possible to the inside of the tank then a solid deflector can be used. Use the split deflector when installation has to be made from the outside of the tank. The split deflector can be disassembled into 2 pieces. The section with flange holes can be passed through the flange opening in the tank wall and installed onto the existing studs or mounting flange bolts. After the first part is securely in place, the second half of the deflector can be passed through the flange opening and secured to the first part using the bolts provided.

Always verify that the vapor seal is in place and undamaged due to transportation and installation movement.

### 9. OPERATION

Foam solution can be delivered to the foam chamber in a variety of ways as previously noted.

The Foam Chamber produces foam by introducing air into the foam solution stream.

Air is drawn into the foam maker section through a series of annular holes located around the integral foam maker. To prevent obstruction, the air inlet holes are protected by a stainless steel screen (mesh) selected with a perforation size designed to exclude most known nesting birds and insects. The open area of the screen is designed to be not less than the total area of the foam maker air inlet holes.

The Aluminium foil burst disc is perforated due to the system supply pressure and the expanded foam enters the main mixing chamber where further agitation takes place before being discharged through the oversized outlet and deflecting onto and down the tank wall before rapidly spreading across the liquid surface.

### 10. GUARANTEE

For details of warranty, refer to Viking's current list price schedule or contact Viking directly.

## 11. INSPECTIONS, TESTS, AND MAINTENANCE

### **NOTICE**

The owner is responsible for maintaining the fire protection system and devices in proper operating condition.

# **A WARNING**

Any system maintenance that involves placing a control valve or detection system out of service may eliminate the fire protection capabilities of that system. Prior to proceeding, notify all Authorities Having Jurisdiction. Consideration should be given to employment of a fire patrol in the affected areas.

### 11.1 Vapor Seal Inspection

Inspection of the vapor seal is recommended as part of the fire protection system maintenance schedule. As Foam Chambers are installed at height, care should be taken to ensure a safe working platform or other suitable access is in place before commencing this work.

The vapor seal is accessed by removing all but one of the inspection cover bolts. The cover can then be rotated to one side taking care not to damage or dislodge the cover seal. A visual inspection can then be performed to check if the foil vapor seal is still intact.



# MODEL VFC FOAM CHAMBERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page.

### 11.2 Vapor Seal Replacement

If the vapor seal needs replacing the retaining bolts on the vapor seal retaining assembly should be carefully removed and kept secure. The assembly cover can then be removed and the vapor seal replaced. Care should be taken to ensure the correct vapor seal is selected in accordance with the instruction in Table 13.1.2.

The vapor seal assembly cover can then be remounted and the retaining bolts secured to a torque of 90 ft-lbs (122 Nm). The inspection cover can be moved back into position taking care that the inspection cover seal is undamaged during the process. The inspection cover bolts can then be inserted and tightened to a torque of 40 ft-lbs (54 Nm).

# 12. DISPOSAL



At end of use the product described here should be disposed of via the national recycling system. Upon request, the manufacturer can take back and properly dispose of the electrical equipment and electronic devices.

### 13. ACCESSORIES AND SPARE PARTS


Due to the wide operating range of the Foam Chambers it is necessary to have different vapor seals depending on the inlet orifice size selected. When ordering spare or replacement vapor seals, care should be taken to check the Foam Chamber orifice size and match with the correct vapor seal as shown in table 13.1.1. The 6" Foam Chamber has 1 vapor seal option for the full orifice range.

1. When the official purchase order is made for the orifice plate kit, the Foam Chamber size, the orifice inlet pressure and desired flow rate must be provided (required).

**NOTE:** The inlet orifice size will be manufactured to match the pressure and flow information provided in step 2 and assembled with the correct vapor seal. Any modifications made after the release of the foam chamber are the responsibility and at the risk of the authorized purchaser. Changes could include but are not limited to an entire system redesign, revamping of system components, restocking fees, etc.

2. The final (ordering) part number will contain the required orifice size. Example: An orifice plate for a 2 1/2" Foam Chamber with a 0.750" orifice will be given the part number F21499/0750.

Table 13.1.1 - Accessories									
Vapor Seals									
Part Number	Orifice Size	Foam	Vapor Seal Thickness						
	Range	Chamber Size	Inches	Millimeters					
F22230	0.600" - 0.875"	2-1/2"	0.0005	0.0127					
F22231	0.875" - 1.050"	2-1/2	0.0007	0.0178					
F22232	0.906" - 1.100"	3"	0.0007	0.0178					
F22233	1.100" - 1.531"	3	0.0015	0.0381					
F22234	1.142" - 1.450"	4"	0.001	0.0254					
F22235	1.450" - 1.900"	4	0.002	0.0508					
F22236	1.900" - 2.481"	6"	0.002	0.0508					
Table 13.1.2 -	Orifice Plate Kit	s (Includes Ori	ifice Plate and	Vapor Seal)					
Part Number	Orifice Size Range	Foam Chamber Size							
F21499	0.600" - 1.050"	2-1/2"							
F21500	0.906" - 1.531"	3"							
F21501	1.142" - 1.900"	4"							
F21502	1.900" - 2.481"	6"							

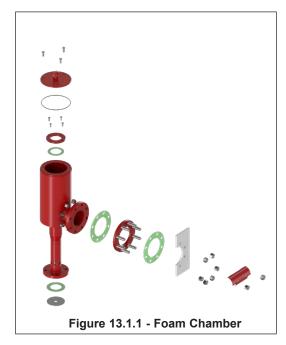

## 14. DECLARATION OF CONFORMITY

If required, contact the appropriate sales office in Section 5 Availability for further assistance.